


01 Delta HLA Plus Devices offer flexibility in usage. You have the option to use the devices as standalone high-water level alarm without an internet connection. However, for complete access to all notification and monitoring features, connect your Delta HLA Plus Device to the internet.



This can be accomplished either through Wi-Fi or Ethernet, based on your convenience and requirements.

02 Naming Delta HLA Plus Device(s) on a network improves organisation. It helps users and administrators easily identify and manage them, especially in complex networks.




03 When installing multiple Delta HLA Plus devices, set each device in sequence for optimal performance.



04 To name Delta HLA Plus Device(s) on a network, this can be done at WiFi or Ethernet Connection. Press and hold the 'COMMS' button for 10 seconds until the "COMMS" button flashes green. It will initially light up red on installation.

The red COMMS button indicates that no connection to COMMS has been made.

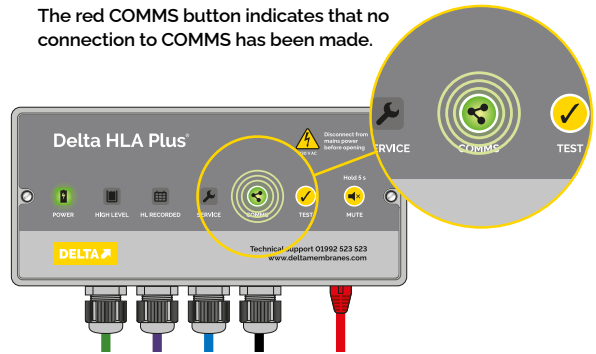

05 Begin by positioning yourself near/in front of the Delta HLA Plus Device. Using your smartphone or other Wi-Fi enabled device (such as a laptop or tablet), search for the Delta HLA Plus Wi-Fi Access Point.



06 Once located, connect your smartphone or other Wi-Fi enabled device to the Wi-Fi Access Point "Delta HLA Plus". After establishing a connection, open Safari, or any web browser and type **192.168.4.1** into the address bar.




07

On the Delta HLA Plus Access Point choose "use Ethernet" or "use WiFi". **Once network choice has been made, select the "Save" option.**



08

Once a network has been selected the Delta HLA Plus Device will reboot. This will take a couple of minutes. The Comms Light on the Device will turn a solid green once the reboot has been completed.

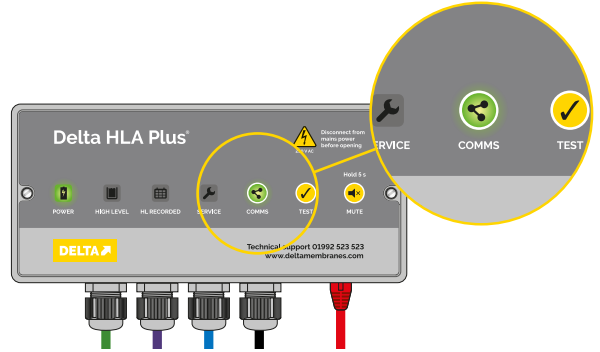


09

After the Delta HLA Plus Device has rebooted from Network configuration. Visit the Delta HLA Plus Local Page deltahlaplus.local

This page displays detailed information and connection status on the Device's local page.


The 'Network Name' option allows you to name your Delta HLA Plus Device(s), helping organise and identify each one easily.

It's important to name your devices separately, (location and water type) for better identification and management.

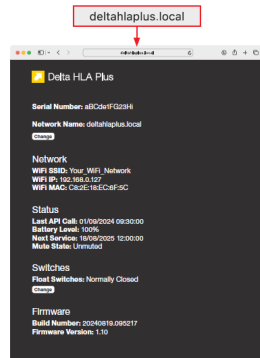

10

The 'Network Name' option in deltahlaplus.local helps you identify and organise multiple Delta HLA Plus Device(s) on a network. Click the Blue 'Call to Action' Button below the "Network Name" to assigned Delta HLA Plus devices to the Network.

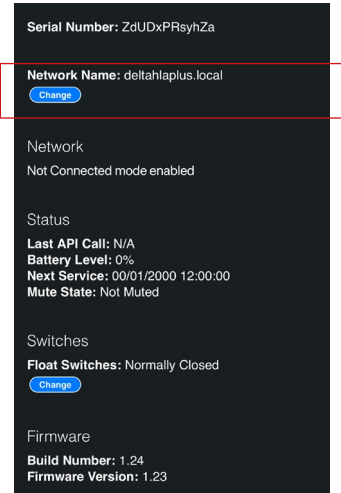


11

You will be taken to a new page titled "Change Network Name" The dropdown menu will offer a list of numbers.

Begin by assigning the first Delta HLA Plus Device as deltahlaplus1.

Click "Save" once assigned.

Each time a Delta HLA Plus Device is assigned to a Network, assign the subsequent number.

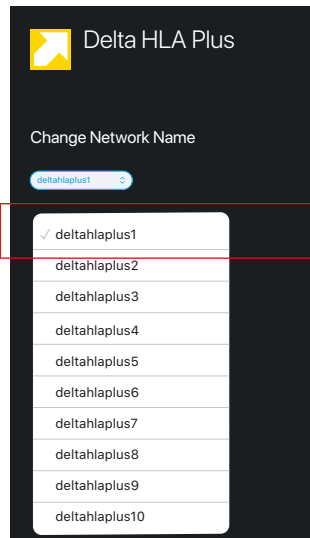

12

Follow processes 1-10 when adding more Delta HLA Plus Devices to the desired network. **Remember to assign subsequent numbers when following steps 1-10.**

